



1. LOAD MACHINE

- The machine is provided with 5 washing programmes
- Dirty clothes have to be sorted according to the quality of fabrics and wash temperatures
- Empty pockets of all items
- Unfold all clothing before putting them into the cylinder
- Mix small and large pieces
- DO NOT overload machine

2. CLOSE DOOR

3. SELECT PROGRAMME

- Push corresponding button of the wash selector switch
 - HOT WASH (with prewash)
 - WARM WASH (with prewash)
 - SYMTHETICS (with prewash)
 - WASH N WEAR
 - COLD WEAR

4. ADD SOAP

- Left Compartment – prewash
- Middle compartment – wash
- Right (small) compartment – fabric conditioner

It is recommended to use special washing products (with foam breaker).

5. PILOT LIGHT

- The red pilot-light is on when the machine is operating
- The green pilot-light indicates when bleaching products are to be added
- The yellow pilot-light indicates when fabric conditioner are to be added

6. SAFETY DEVICES

- The drain valve is always open when its solenoid has no current
- If power is interrupted water will be exhausted from the machine, allowing the unloading of the cylinder
- The machine is provided with a door interlock switch assembly
- The purpose of this door interlock is to prevent the machine from starting when the loading door is open and also to prevent the loading door from opening when the machine is running

7. DIRECTION OF SPIN

- 3-poled machines must spin clockwise.
- If not, switch on the connection terminal network both black wires from the connection cable



Operating Instructions – 50lb Machine

Version No:

4

Revision History	Version:	4
	Developed By:	Laundry Supervisor
	Authorised By:	GM- Corporate Services
	Date Authorised:	October 2002
	Date Last Reviewed:	November 2006
	Date Of Next Review:	November 2008